


MC10RK


Repair Instructions for MC10 quad outlet compressor




1. Unplug unit and remove the 4 screws from the bottom housing of the compressor.

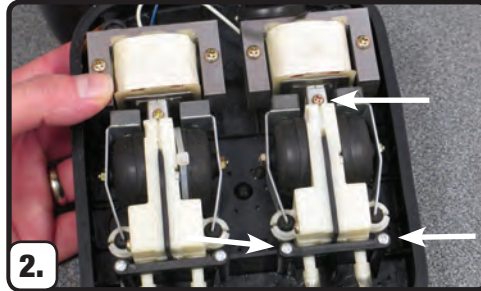

2. Remove the three screws that hold the diaphragm to the base.

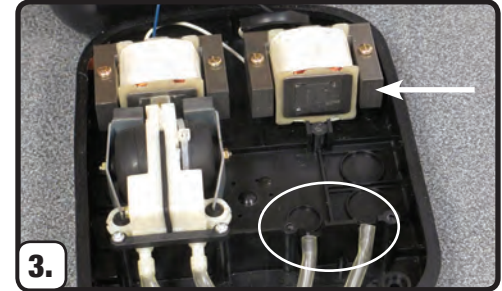

3. Remove the diaphragm from compressor leaving the air tubes. Inspect magnets and clean if needed.

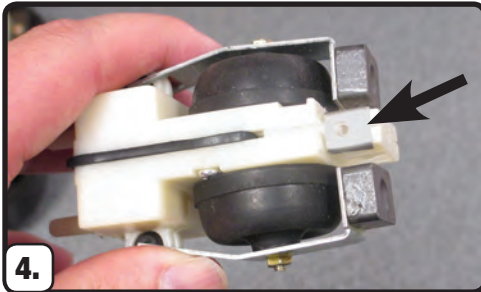

4. Locate metal bracket on back of repair kit and be sure it is up when installed.



5. Match the air outlets to the air tubes and re-install screws.



6. Re-install screws into compressor housing.