 


# MC10RK

 
## Repair Instructions for MC10 quad outlet compressor




**1.** Unplug unit and remove the 4 screws from the bottom housing of the compressor.

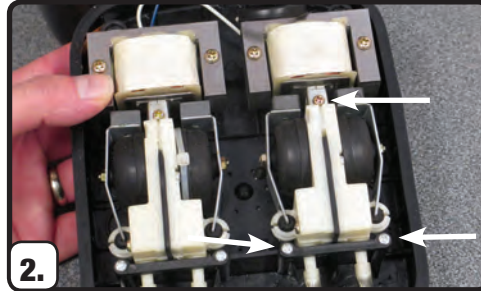

**2.** Remove the three screws that hold the diaphragm to the base.

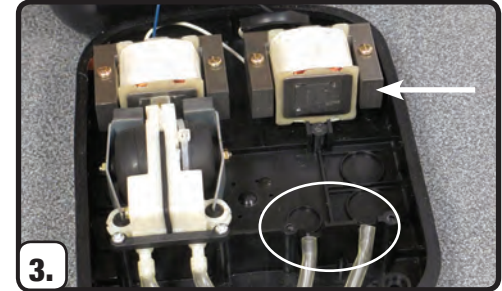

 **3.** Remove the diaphragm from compressor leaving the air tubes. Inspect magnets and clean if needed.

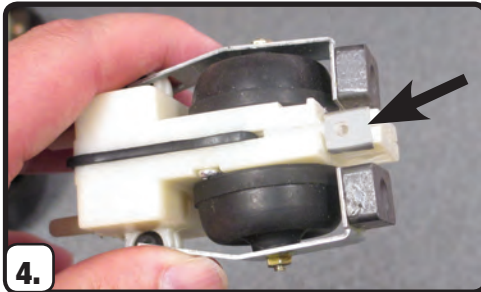

**4.** Locate metal bracket on back of repair kit and be sure it is up when installed.



**5.** Match the air outlets to the air tubes and re-install screws.



**6.** Re-install screws into compressor housing.