



## Installation Instructions for Ultrasonic Repeller

*"The silent watch dog!"*

### SAFE WAY TO KEEP UNWANTED PESTS AWAY

- The built in sensor repels dogs, cats, raccoons, deer, squirrels, chipmunks, mice, voles, rabbits, etc.
- Directional protection range of up to 22½' feet - 7 meters
- Infrared sensing angle of 80° degrees
- Pests are conditioned not to return
- Adjustable settings for distance and sensitivity
- Can be staked in the landscaping or mounted to a fence

### ULTRASONIC IS AN EFFECTIVE ANIMAL DETERRENT

The built-in motion sensor detects the animals entering the area and emits a piercing, high-decibel alarm that startles the pest and frightens it away. Since it is ultrasonic, you and your neighbors cannot hear it.


- A powerful burst of ultrasonic sound startles the pest
- The pest(s) equate the location with an unpleasant experience
- The pest(s) avoid the area in the future
- Most effective ultrasonic deterrent since it activates only when the pest comes within range. This unpredictability for the pest, makes it more effective.

### SETTING UP AND MOUNTING THE UNIT

- Remove the battery door (being careful not to press on the lens or speaker).
- Install six "C" alkaline batteries, and then close the battery door. After 60 seconds, the Ultrasonic Repeller is ready. The red light stays on for two seconds indicating that the unit has been triggered.
- Position the Ultrasonic Repeller pointing with an unobstructed view of the area you want protected. The unit has a maximum effective sensitivity range of approximately 22½', with an 80° sensing angle.

**Stake mounting in the landscaping:** Push the Ultrasonic mounting stake into the soil first then attach the Ultrasonic unit using the provided screws. Once attached, reposition the unit approximately 4" above ground level.


**For wall or fence post mounting:** Use the template provided to locate the screw hole positions. NOTE: The maximum mounting height is 12" or 30.48 cm. Drive in the screws leaving a ¼" or 4 mm gap. Line up the screw heads with the keyholes in the Repeller, and hang the unit on the screw heads.

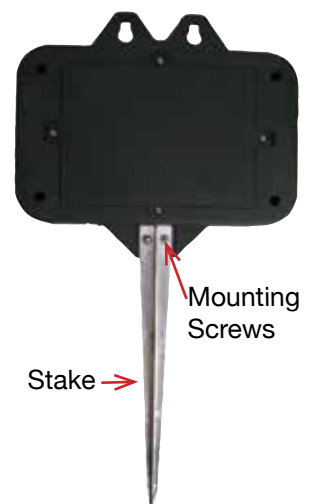

## ADJUSTING SENSITIVITY AND FREQUENCY

Unwanted Pest	Sensitivity Distance	Frequency Intensity
Deer	Low	Low
Raccoons, Dogs, Cats	Medium	Medium
Squirrels, Rabbits, Mice	High	High

Sensitivity and frequency settings may need to be individually adjusted to ideal settings for your unique application, use this chart only as a guide.

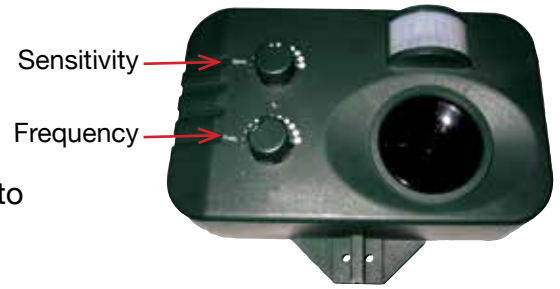

## SPECIFICATIONS

The Ultrasonic Repeller automatic outdoor animal deterrent is constructed of durable weather resistant materials and has been designed to provide many years of reliable service.

- Detection range: 19.5' to 22.7' – 6 to 7 meters
- Sensor warm up: 60 seconds
- Unit on time when activated: three seconds
- Red LED light: indicates when the unit is activated
- Infrared sensing angle: 80 degrees
- Output frequency: 10-50 KHZ
- Power supply: 9 volts - 6 "C" alkaline batteries
- Battery life: up to 2000 activations

### WARRANTY INFORMATION:

This product is warranted against any mechanical or material defects for a period of six months from the date of purchase. Warranty only covers properly installed and maintained units.

The warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence or accident. Similarly, any modification made by the purchaser to the product will cause the warranty to be null and void. All returned items will be inspected to determine cause of failure before warranty is approved.

Warranty does not cover any cost associated with the installation or removal of the product subject to warranty claim.

An RA number must be obtained by calling EasyPro Pond Products at 800-448-3873. It is your responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), name, return address and phone number inside of the package. No warranty claims will be honored without the original receipt.

Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

The manufacturer or supplier shall not be held liable for any damages caused by defective components or materials of this product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this product.

The manufacturer or supplier shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this product.

