




Outdoor Timer with Photo Eye

Instructions for Operation • Safety • Warranty

WARNING! SAFETY AND ELECTRICAL RATINGS

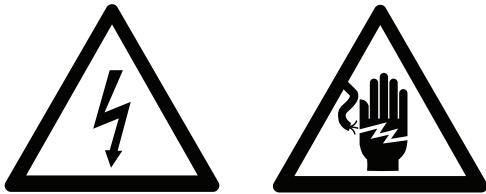

- This product must be properly grounded.
- Use with GFCI receptical only.
- Do not modify the plug provided. If it will not fit the outlet, have the proper outlet installed by a qualified electrician.
- Check the condition of the power supply wiring. Do not permanently connect this product to wiring that is not in good condition or is inadequate for the requirements of this product.
- Do not exceed maximum capacity of unit.
- Failure to follow these instructions can result in death, fire, or electrical shock

Electrical ratings:

Input: 120Vac, 1000W, 60Hz

Output: 120Vac, 1000VA, 60Hz



Installation and Use:

1. Unit must be installed in a vertical position with outlets directed away from any rain or moisture intrusion. **DO NOT SUBMERGE UNIT!**
2. Unit has mounting slot to be secured to vertical surface.
3. Unit must be plugged into GFCI protected outlet.
4. EPT19 timer with photo eye is typically used with outdoor lighting systems with devices that do not have a photo eye and when automatic operation is desired (max. 1000 watts).
5. Unit must be positioned in a place where the photo eye is not obstructed from properly sensing the light conditions. Do not place in dark corner or in a concealed area.

6. When unit is plugged in, the display will light.
7. **Setting options:** As viewed on unit's display
 - “A” - Automatic setting for dusk to dawn operation, power will be turned on automatically in low light settings (i.e. at dusk). Power will be turned off in bright light settings (i.e. dawn)
 - “O” - Power is ON
 - “blank” - Power is OFF
 - “1-9” - Automatic setting for on at dusk (low light). Timer will begin and provide power for number of hours displayed and will remain off until cycle of bright light and low light settings reoccur. (for example: If “4” is displayed, the unit will turn on in low light setting and run for four hours and then turn off. Unit will turn on again after cycle of bright and low light settings)

Use the up and down arrows on front of unit to toggle to desired setting.

Order of settings:

Up arrow: “blank” “O” “A” “1” “2” “3” “4” “5” “6” “7” “8” “9”

Down arrow: “blank” “9” “8” “7” “6” “5” “4” “3” “2” “1” “A” “O”
8. If there is a power outage or an interruption in power, the unit will need to be restored to desired settings.
9. Photo eye can take 30-60 seconds to monitor the light conditions.

EasyPro Pond Products Limited Warranty

EasyPro Pond Products (“EasyPro”) warrants to the purchaser that this product (“Product”) will be free from any mechanical or material defects for a period of **one year** from the date of purchase. This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro’s quality control standards. Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers.

This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim.

All returned items will be inspected to determine cause of failure before a warranty claim is approved. The exclusive remedies provided hereunder shall, upon EasyPro’s inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

Making a Claim: A Return Authorization (“RA”) number must first be obtained by calling EasyPro at 800-448-3873 or via email at warranty@easypro.com. It is the purchaser’s responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEAREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.



(800) 448-3873 • Grant, Michigan • www.easypro.com