



Installation Instructions for Ultrasonic Repeller

“The silent watch dog!”

SAFE WAY TO KEEP UNWANTED PESTS AWAY

- The built in sensor repels dogs, cats, raccoons, deer, squirrels, chipmunks, mice, voles, rabbits, etc.
- Directional protection range of up to 22¹/₂' feet - 7 meters
- Infrared sensing angle of 80° degrees
- Pests are conditioned not to return
- Adjustable settings for distance and sensitivity
- Can be staked in the landscaping or mounted to a fence

ULTRASONIC IS AN EFFECTIVE ANIMAL DETERRENT

The built-in motion sensor detects the animals entering the area and emits a piercing, high-decibel alarm that startles the pest and frightens it away. Since it is ultrasonic, you and your neighbors cannot hear it.


- A powerful burst of ultrasonic sound startles the pest
- The pest(s) equate the location with an unpleasant experience
- The pest(s) avoid the area in the future
- Most effective ultrasonic deterrent since it activates only when the pest comes within range. This unpredictability for the pest, makes it more effective.

SETTING UP AND MOUNTING THE UNIT

- Remove the battery door (being careful not to press on the lens or speaker).
- Install six “C” alkaline batteries, and then close the battery door. After 60 seconds, the Ultrasonic Repeller is ready. The red light stays on for two seconds indicating that the unit has been triggered.
- Position the Ultrasonic Repeller pointing with an unobstructed view of the area you want protected. The unit has a maximum effective sensitivity range of approximately 22¹/₂', with an 80° sensing angle.

Stake mounting in the landscaping: Push the Ultrasonic mounting stake into the soil first then attach the Ultrasonic unit using the provided screws. Once attached, reposition the unit approximately 4" above ground level.


For wall or fence post mounting: Use the template provided to locate the screw hole positions. NOTE: The maximum mounting height is 12" or 30.48 cm. Drive in the screws leaving a 1/4" or 4 mm gap. Line up the screw heads with the keyholes in the Repeller, and hang the unit on the screw heads.

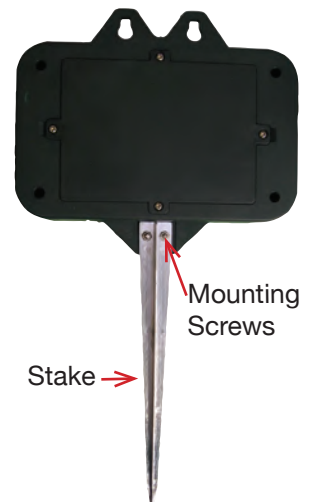

ADJUSTING SENSITIVITY AND FREQUENCY

Unwanted Pest	Sensitivity Distance	Frequency Intensity
Deer	Low	Low
Racoons, Dogs, Cats	Medium	Medium
Squirrels, Rabbits, Mice	High	High

Sensitivity and frequency settings may need to be individually adjusted to ideal settings for your unique application, use this chart only as a guide.

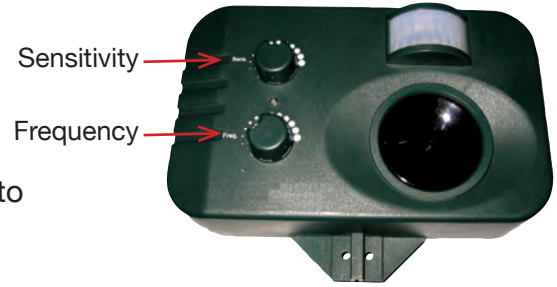

SPECIFICATIONS

The Ultrasonic Repeller automatic outdoor animal deterrent is constructed of durable weather resistant materials and has been designed to provide many years of reliable service.

- Detection range: 19.5' to 22.7' – 6 to 7 meters
- Sensor warm up: 60 seconds
- Unit on time when activated: three seconds
- Red LED light: indicates when the unit is activated
- Infrared sensing angle: 80 degrees
- Output frequency: 10-50 KHZ
- Power supply: 9 volts - 6 "C" alkaline batteries
- Battery life: up to 2000 activations

EasyPro Pond Products Limited Warranty

EasyPro Pond Products ("EasyPro") warrants to the purchaser that this product ("Product") will be free from any mechanical or material defects for a period of **six months** from the date of purchase. This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro's quality control standards. Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers.

This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim.

All returned items will be inspected to determine cause of failure before a warranty claim is approved.

The exclusive remedies provided hereunder shall, upon EasyPro's inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

Making a Claim: A Return Authorization ("RA") number must first be obtained by calling EasyPro at 800-448-3873 or via email at warranty@easypro.com. It is the purchaser's responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.



800-448-3873 • Grant, Michigan
www.easypro.com