



Spirit

Pond & Waterfall Pumps Instructions for Operation • Safety • Warranty

Designed for minimal solids applications



Thank you for purchasing the Spirit Pond & Stream pump from EasyPro. These pumps are designed for continuous duty use in small ponds, statuary, Just-A-Falls, etc. A great choice for ponds with light debris laden water.

Specifications



- Can be run in vertical or horizontal positions for compact applications
- Oil-less design, fish and plant safe
- Impeller designed for passing debris up to 1/4" diameter
- 1 1/4" female threaded outlet with a 1 1/4" x 1 1/2" elbow included
- Triple sealed 115v motors with 18 month warranty
- Automatic overload and thermal protection with self reset



Run in vertical or horizontal position




Safety & Electrical Connections

1.  Always disconnect the electricity supply before handling, maintaining, repairing or installing any pond equipment.
2. Always make sure you know the correct amps and voltage required before installing.
3. Use dedicated power outlet only. Sharing the outlet with other equipment may cause overheating and fire.
4. EasyPro TLS pumps come in 115 volt only.
5. Always connect to a Ground Fault Circuit (GFCI) to prevent electrical shock. Never submerge connecting power cable plug in water.
6.  Never let the pump run without water as this will damage the impeller, over heat and possibly burn out the pump. This pump must stay submerged entirely when operating. If used in a skimmer, the debris net must be kept clean to ensure adequate water flow to pump. Running pump low on water will cause overheating, premature failure and will void warranty.
7. Do not use this product in bathrooms or swimming pools. For use with fresh water only.
8. Do not let the water level in your water feature fall below the top of the pump body.
9. All electrical work must be performed by a qualified technician. Always follow the National Electrical Code (NEC) or the Canadian Electrical Code as well as all local, state and provincial codes. Code questions should be directed to your local electrical inspector. Failure to follow electrical codes and OSHA safety standards may result in personal injury or equipment damage. Failure to follow manufacturer's installation instructions may result in electrical shock, fire hazard, personal injury or death, damaged equipment, provide unsatisfactory performance and may void manufacturer's warranty.
10. Do not attempt to disassemble pump during the warranty period. If there are any questions please contact your local EasyPro dealer.
11. Never use an extension cord or tamper with power cord. Power cord cannot become bent, twisted, abraded or cut. A damaged cable may cause electric leakage, shock or fire.
12. The motor has a built-in protection system which stops the pump when overheating occurs due to excessive load or low water, this can be caused by clogging at inlet/outlet or when fluctuations occur in power supply. The cooling time is roughly 15 to 20 minutes, then the pump will automatically come back on. If the overload is tripped, it is essential to identify and remedy the cause of the overheating.


Installation

- Do not paint casing, over heating may occur
- Lift only by handle, not by power cable or float switch
- Do not hang pump in water, install on solid flat base in upright or horizontal position
- Install proper outlet adapter for pipe or hose
- Make sure that power cable plug and power outlet are away from water and water discharge pipe/hose.

Operation

1.  Do not start operation with people standing near intake or outlet.
2. Do not operate out of water.
3. Pump must remain fully submersed.
4. Only use pump for circulation, transfer or removal of water with limited solids 1/4" or smaller.
5. Do not pump oil, salt water, sewage, food or chemical liquids.
6. Do not allow dry operation
7. Do not allow foreign objects to clog or enter intake
8. In case of power outage, turn off power switch to avoid damage when power is restarted.
9. If excessive vibration occurs turn off power immediately.

Service & Maintenance

1.  Disconnect all power supplies before inspection or service to avoid possible electrical shock.
2. The pump should be removed from the pond on a regular basis, cleaned and checked over for damage to prolong the life of the pump.
3. Clean the impeller and intake screen when the flow is visibly reduced.
4. Clean the pump and impeller with clean fresh water.
5. Check inside the impeller housing for large debris or algae, which could reduce the flow.
6. Check and tighten nuts and bolts if required, refer to dealer for advice on other repairs.
7. Winterization/Storage: When the pump is out of use for extended time - wash and dry it then store indoors in a non-freezing location. It is best to store in a bucket with about an 8" water depth. It is essential to prevent any risk of the pump freezing.
8. If the pump is left in water but not operating regularly, test run it at least once a week.

Trouble Shooting

Before taking any trouble shooting action, disconnect pump from the power supply. If there is any damage to the power cord or pump, repairs or replacements must be handled by EasyPro or a qualified party.

Does not start • Make sure power cord is plugged in

- Float (not included) may not be moving freely, increase depth

Does not shut-off • Pump is not disabled by float (not included), make sure float can move freely

Humming • Line circuit breaker is off, fuse is burned or loose

- Pump cord is not making contact in receptacle

Running, no water • Suction grid or piping are clogged

- Impeller is worn or stuck
- Required head is too high for the pump specifications
- Water level is too low

Running, very little water • Pump is air-locked, start and stop several times by plugging and unplugging cord, check for clogged vent hole

- Vertical pumping distance is too high or the pipe size is too small
- Inlet or impeller clogged
- Low water conditions with pump sucking air

GFCI breaker tripping • Mechanical seals may need to be replaced

- Power cord may be damaged and getting wet
- Nuisance trip due to improper grounding
- Overloaded circuit


Motor briefly starts and stops • Low water conditions, pump overheating

- Inlet or impeller clogged
- Improper power supply

Pumps stops • Make sure water being pumped is not too dense, causing the pump to overheat.

- Clear obstructions on impeller
- Check power supply to comply with nameplate data
- Wait for pump to cool, correct reason for overheating, plug back in and resume operation

Specifications

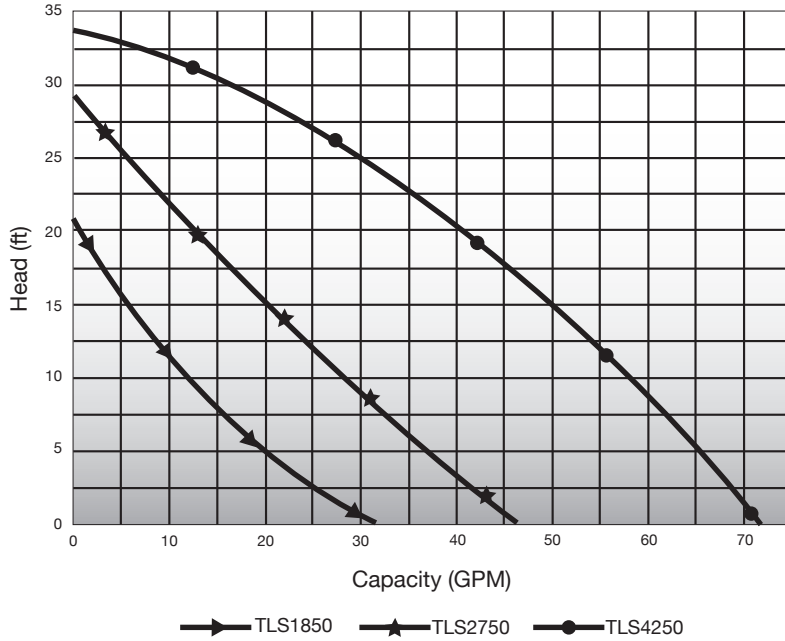

Discharge 1¹/₄" fpt • Elbow 1¹/₂" fpt
 Voltage 115v, 60 hz • Power Cord 16'

Part #	Maximum Gph	Hp	Watts	Maximum Head
TLS1850	1850	1/4	260	21'
TLS2750	2750	1/3	370	29'
TLS4250	4250	1/2	820	33'

EasyPro Pond Products Limited Warranty

EasyPro Pond Products ("EasyPro") warrants to the purchaser that this product ("Product") will be free from any mechanical or material defects for a period of **18 months** from the date of purchase. This warranty does not cover accidental damage to the product due to abuse or negligence by the consumer. This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro's quality control standards. Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers.

This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim.

All returned items will be inspected to determine cause of failure before a warranty claim is approved. The exclusive remedies provided hereunder shall, upon EasyPro's inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

Making a Claim: A Return Authorization ("RA") number must first be obtained by calling EasyPro at 800-448-3873 or via email at warranty@easypro.com. It is the purchaser's responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEAREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.



800-448-3873 • Grant, Michigan
www.easypro.com